

 **MONSTRUM®**

CYBORG

1x PRISM OPTICS
ULTRACOMPAKT



1x20
PC120

Monstrum PC120 CYBORG Prism Scope Features:

- Electronic Controls with 11 Levels of red and green illumination.
- UltraLUX Multi-layer Lens Coating for a sharper image.
- Made of durable and lightweight 6061 Aircraft-grade Aluminum.
- Power saving Sleep-mode with Shake Awake.
- 1.55" High Aimpoint® Micro* compatible mount with Torx lockdown bolts.
- IPX7 Waterproof & Fogproof rated for trouble-free performance.
- This product is provided with a Lifetime Warranty.


*We are not affiliated, associated, authorized, endorsed by, or in any way officially connected with Aimpoint®, or any of its subsidiaries or its affiliates. The names Aimpoint® and Micro as well as related names, marks, emblems and images are registered trademarks of their respective owners.

Your package includes:

- PC120 CYBORG 1x Prism Scope
- CR2032 Battery
- Torx Wrench
- Lens Cloth

For more accessories for your product, visit us online:

MonstrumTactical.com

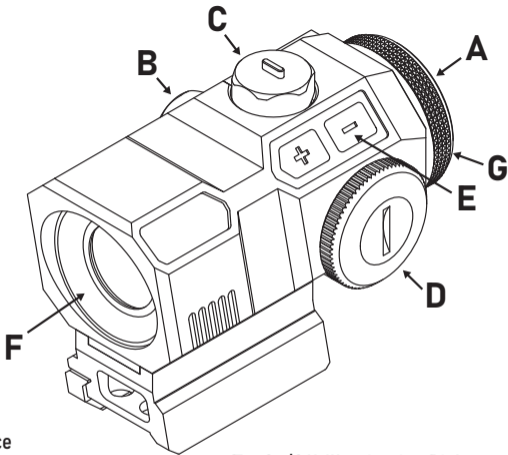

A - Eyepiece

B - Windage Adjustment

C - Elevation Adjustment


D - Battery Door

E - On/Off, Illumination Dial

F - Objective Lens

G - Diopter Adjustment

Installing the Battery

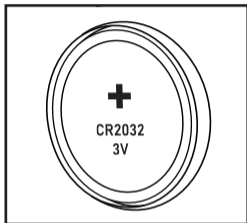

The CYBORG Prism Scope comes with a CR2032 3V Battery.

The battery can be replaced by removing the battery cap located at the end of the illumination dial. Insert it with the negative (-) face down.

Be sure to tighten the battery door fully to prevent connection issues.

Operating the Sight

Illumination Controls

Turn On: Press either the [+] or [-] buttons on top of the unit.

Turn Off: Hold the [-] button down for 3 seconds.

Reticle Color: Hold the [+] button down for 3 seconds to switch between Red and Green.

Increase Brightness: Press the [+] button.

Decrease Brightness: Press the [-] button.

This sight has 11 illumination levels in both Red and Green. Brightness settings are saved to memory each time it is turned on and off.

Shake Awake

The red dot will automatically enter sleep mode when idle for 10 minutes.

Full power down in 2 hours. Turn the reticle back on during sleep mode by giving the unit a shake. Brightness settings are saved to memory each time it is turned on and off.

Mounting the Sight

The scope features a built-in mount. The mount attaches to a 1913 Picatinny style rail. First loosen the mounting bolts with the included T15 Torx wrench, install into position on your weapon's rail system, and then hand tighten plus 1/4 turn (approximately 30 in-lbs).

The height of the optic center point is exactly 1.55 inches from the rail top.

Adjusting the sight

This optic features 1/2 MOA windage and elevation adjustments located on the top and side. To adjust your aim, simply remove the caps and use the projected tab on the backside of the cap to rotate the dial.

Elevation Adjustments - Top Dial. Adjust this setting if the point of impact is too high or too low from the target. Rotating this dial counter-clockwise will lower the aim point and raise your impact point. Rotating it clockwise will raise the aim point and lower your impact point.

Windage Adjustments - Side Dial. Adjust this setting if the point of impact is left or right from the target. Rotating this dial counter-clockwise will move the aim point left and move your impact point right. Rotating it clockwise will move the aim point right and move your impact point left.

Maintenance

- This device is fully sealed and IPX7 waterproof. Make sure to fully tighten the caps to prevent moisture and dirt entering the internals.
- Always clean the lenses and surfaces with a clean microfiber cloth. Other materials may scratch the glass or surfaces.

Troubleshooting

Illumination is not turning on:

Check to see if the Battery cap is fully tightened.

Illumination is not bright enough:

Try replacing the battery.


Impact point is changing between groups:

Check that the mounting bolts underneath the sight are tight. Make sure the rail mount is tightened sufficiently and that the sight does not move while installed on your weapon.

Check Diopeter Settings.


Look through the optic at the reticle. It should appear sharp. Some prescriptions may make the reticle appear blurry. If so just adjust the Diopeter on the eyepiece to bring it into focus.

Specifications

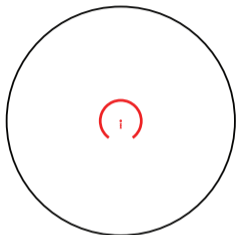

**BDC-P1
Reticle**

OR

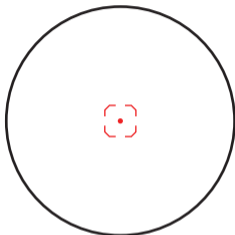

**DX1
Reticle**

- Magnification: 1x
- Objective: 20mm
- Length: 3.6in (92mm)
- Weight: 10.2oz (289g)

- Elevation Range: ± 40 MOA
- Windage Range: ± 40 MOA
- Adjustment Scale: 1/2 MOA/click

Warranty

Monstrum guarantees this product against defects in materials and workmanship for the **LIFETIME** of this product. If you have any questions or issues with your product, contact us 24 hours a day at MonstrumTactical.com

MonstrumTactical.com

All information and images are (c) 2022 Monstrum Tactical Inc